


Uni-P Vantix 950 AIR MOVERS

Installation, Operation & Service Instructions

– READ AND SAVE THESE INSTRUCTIONS –

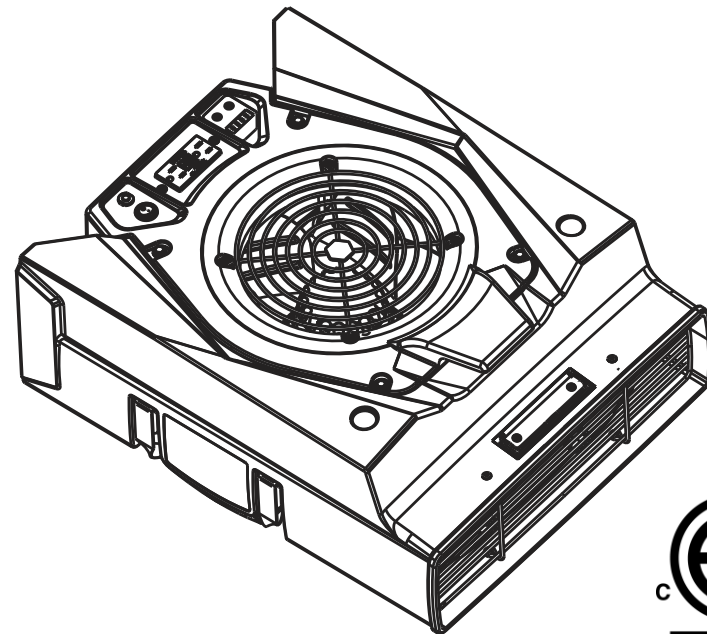

ADD: 2048 E. Francis St Ontario CA 91761

Tel: 888-994-0895

E-mail: Sales@unipdry.com

Important Safety Measures

CAUTION:

The Installation, operation, and maintenance of the Uni-P Vantix 950 dehumidifier come along with substantial electric shock-risks. It can cause property damage, death and/or injury. In order to reduce exposure to the electric shock-risks you should observe the following instructions:

- You should never run the cord under the carpet. Make sure that they are not covered with runners, throw rugs or other suchlike coverings.
- You should not route the cord under appliances or furniture. Make sure that the cords are located away from traffic areas of the room and where they cannot be tripped over.
- Make sure the cords and plugs are in a proper state and that they are neatly organized before operating the dehumidifier.
- You should never use a bench or stool when locating the device.
- The device is suitable for indoor use only.
- You should never block air outlet and intake. There should be at least a one-foot distance from the wall or other forms of obstructions.
- Make sure you first unplug the fan before you do any servicing.
- Make sure that the dehumidifier is not exposed to rain or any stagnant water.
- This type of device is not suitable for use near or together with the Solid-State Speed Controls

While Operating the Unip vantix 950:

- Always use a grounding plug and grounded electric outlet to reduce risk of fire and shock
- Always use caution when stacking units to prevent them from falling. Avoid stacking units in 'crowded areas.
- Always secure units during transportation to prevent them from moving.
- Always maintain a reasonable distance between the air inlet and carpet or other materials. Failure to do so may clog the inlet or cause overheating.
- Always keep the motor free of dirt, dust, and other particles that could cause the motor to overheat. Clean the motor with a vacuum if it gets dirty.
- Always unplug the machine before performing any maintenance.
- Always contact an authorized technician for help repairing your machine.
- Always use the unit on a level, steady surface.


Identification

Congratulations on purchasing a Unip Vantix 950 air mover. In order to take advantage of the warranty plan, be sure to note the serial number and date of purchase.


Serial Number:

Date of Purchase:

Parts Identification

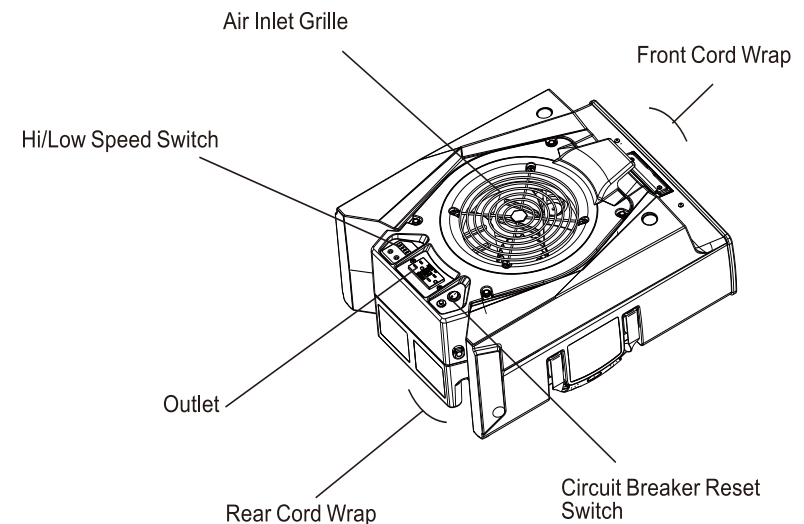

Housing Disassembly

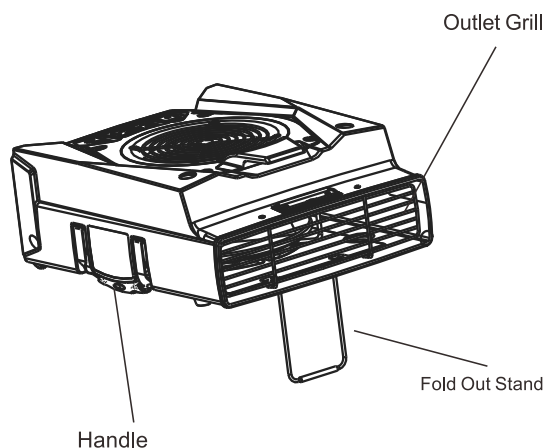

Operating Positions



Horizontal



Stand



Left



Right



Vertical

Operating Instructions

NOTE: Prior to use, verify that the power cord and plug are not broken.

- Ensure the power switch is off, then unwrap the power cord and plug it into a standard 115V GFCI-protected outlet.
- Point the air outlet towards the area that needs to be dried.
- Press the Up or Down button to adjust the airflow speed on the panel.
- Once the surface is dry, turn the unit off and unplug the power cord.
- Wrap the power cord around the machine in a clockwise direction and secure with a clip.
- Use the handle to move the machine to the next drying area or to storage. The units may be stacked for transportation or storage

NOTE: Always keep the units dry.

Circuit Breaker Reset

The Uni-P Vantix 950 is equipped with a Circuit Breaker Reset Switch to protect from fire or shock risk. The Circuit Breaker switch will:

- Automatically cut off power to the machine if the circuit is overloaded
- Automatically cut off power to the machine if it finds a ground fault

If reset switch is flipped, complete the following steps:

- Check the power line for any damage and ensure it is properly connected to a grounded outlet
- Press the Circuit Breaker Reset Switch to restart the unit


Maintenance

Cleaning the Housing & Impeller

If dust or dirt has accumulated on the impeller, you will need to disassemble the housing (see instructions on next page) to clean it. Do not use liquids to clean the impeller- only a cloth on pressurized air. The housing can be cleaned with a damp, cloth but always ensure it is dry prior to reassembling.

Housing Disassembly

To disassemble the housing for cleaning, follow the steps below:

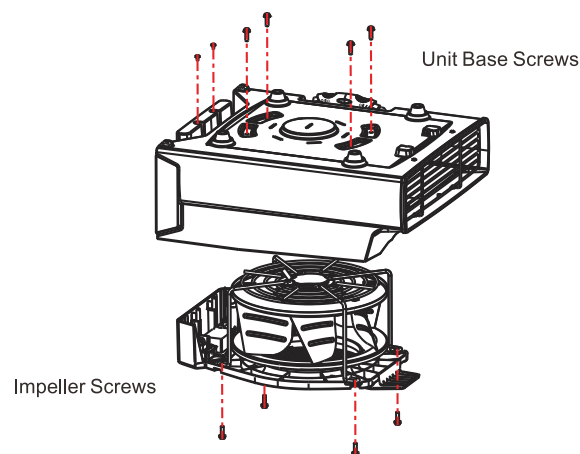

1. Remove four screws on from impeller side.
2. Remove the six screws from the unit base, then lift off the housing.

Warranty

All warranty benefits apply to the original owner only. Warranty cannot be transferred or assigned.

1 Year (from date of purchase): Unipdry warrants the machine will operate free of defects in workmanship and materials. At it's discretion, Unipdry will repair or replace any malfunctioning components, free of charge (excluding transportation costs)

Customer Responsibilities: In order to take advantage of the warranty service, the customer must do the following:

1. Customer must provide normal care and maintenance (including, but not limited to cleaning filters)
2. Removal and re-installation of unit is the sole responsibility of owner.
3. If customer cannot return unit to certified repair center, all costs associated with shipment are borne by the customer. In addition, all ancillary charges related to freight shipments, including but not limited to palletizing, wrapping, labeling, and pickup are associated with customer.
4. If shipped, customer is responsible for all risk of loss or damage.

Unipdry Warranty Steps:

1. Once receive the goods, customers must log in www.unipdry.com to fill out the warranty registration form and submit to unipdry company. We will receive your purchasing and installation information and save it. If no warranty registration is sent to us, warranty period will begin the day the shipment left the warehouse. Please be sure to record serial # and date of installation. You will need this information to receive the RA number.

2. If warranty service is necessary, customers must contact Unipdry Tech Support by sales@unipdry.com or local technical service phone to receive a Return Authorization (RA number). Once an RA has been issued, customers should bring the unit to a certified repair center. Unipdry will arrange the shipping to bring me the unit back to the Unipdry warehouse (at the expense of the customers) if customers are not available.

3. After the unit has been received by Unipdry (whether at a repair center or the warehouse) Unipdry will have an initial inspection. If it is determined to be invalid warranty claim (see exclusions below), customers have to pay for all associated repair costs and shipping costs for units repair.

4. Customers can pick up the unit after repair at their own expense for shipping. Units will have a rigorous testing before sending it back to customers.

5. If the unit can no longer be fixed, and it is in the warranty period and determined to be valid claim, we will ship the customer a new unit within the same year warranty from the date of replacement.

6. After parts are repaired or replaced by Unipdry, the original warranty period continues to apply until meet its deadline. No extensions to the original warranty period.

Warranty Exclusions:

DAMAGE DUE TO THE FOLLOWING IS NOT covered under warranty

1. Acts of Nature- including but not limited to:

flooding

fire

water damage

hurricane/storm damage

2. IMPROPER USAGE- Including but not limited to:

misuse, abuse, or tampering whether intentional or accidental

improper installation or design

Improper voltage

lack of normal care

failure to follow instructions

- ### 3. Corrosion

- #### 4.Freezing

5. Any additional costs due to changes in laws or building codes

- 6.Freight charges

7. Any costs due to lost profit or delay

- ## 8. Damage to property

- 9.Cause beyond control

10. Consumable parts, including but not limited to

filters

batteries

power cords

valves

switches

rubber parts

11. Direct, indirect, collateral or consequential damages of any kind

THE WARRANTIES AND LIABILITIES SET FORTH ARE IN LIEU OF ALL OTHER

WARRANTIES EXPRESSED OR IMPLIED, IN LAW OR IN FACT, INCLUDING IMPLIED

WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR

PURPOSE. Unipdry's total liability, regardless of nature of claim shall not exceed original

purchase price of the product. If a product or component is replaced while under warranty,

the applicable warranty period shall not be extended beyond the original warranty

time period.

The foregoing shall constitute the total liability of seller in the case of defective performance of all or any of the equipment or services provided to Buyer, Buyer agrees to accept and hereby accepts the foregoing as the sole and exclusive remedy for any breach or alleged breach of warranty by Seller

Any dishonesty or fraud in connection with Unipdry warranty thorouahly voids all warranty policies.Unipdry expressly reserves the right to pursue legal action in the event of dishonesty, fraud. or attempted fraud.

Wiring Diagram

